

Start Capacitor

Part Number	Capacitance (uF)
40MF/330VAC	40-48
47MF/330VAC	47-56
60MF/330VAC	60-72
88MF/330VAC	88-108
108MF/330VAC	108-130
124MF/330VAC	124-149
161MF/330VAC	161-193
200MF/330VAC	200-250
270MF/330VAC	270-324

330VAC

Run Capacitor

Part Number	Capacitance (uF)
2MF	2
3MF	3
4MF	4
5MF	5
6MF	6
8MF	8
10MF	10
12MF	12
15MF	15
20MF	20
25MF	25
30MF	30
35MF	35
40MF	40
45MF	45
50MF	50
60MF	60
70MF	70
80MF	80

440VAC, DQC

For more information, please call Refrigeration Distributors (02) 9743 7911
1/10 Ferngrove Place, Chester Hill NSW 2162
www.rdl.com.au



Wholesale-Consulting-Engineering

